




How to start a public hotspot on
Bosch Coach MediaRouter


hotspots GmbH
www.hotspots.de

1. After successfully connecting to the Coach MediaRouter, please open your browser and navigate to the URL 192.168.1.1 or enter this address: “http://bosch.router”.

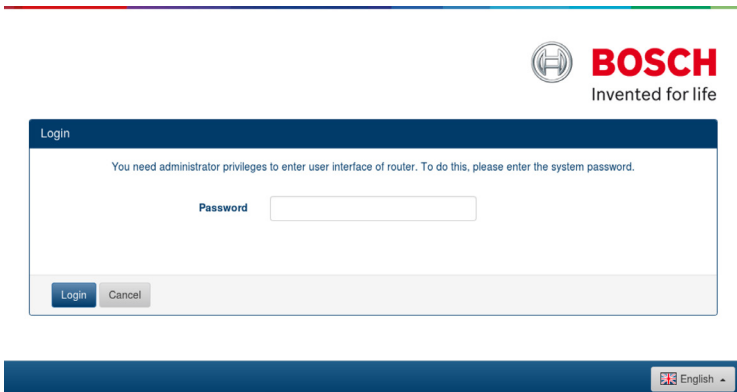

The image shows the Bosch login interface. At the top right is the Bosch logo with the tagline "Invented for life". Below it is a "Login" section with a message: "You need administrator privileges to enter user interface of router. To do this, please enter the system password." There is a "Password" label and a text input field. At the bottom of the login section are "Login" and "Cancel" buttons. At the bottom right of the entire interface is a language selector showing "English".

2. Log in with your credentials (default password is “admin”) and fill in the PIN of your SIM card in the designated field and select the provider that fits your rate.

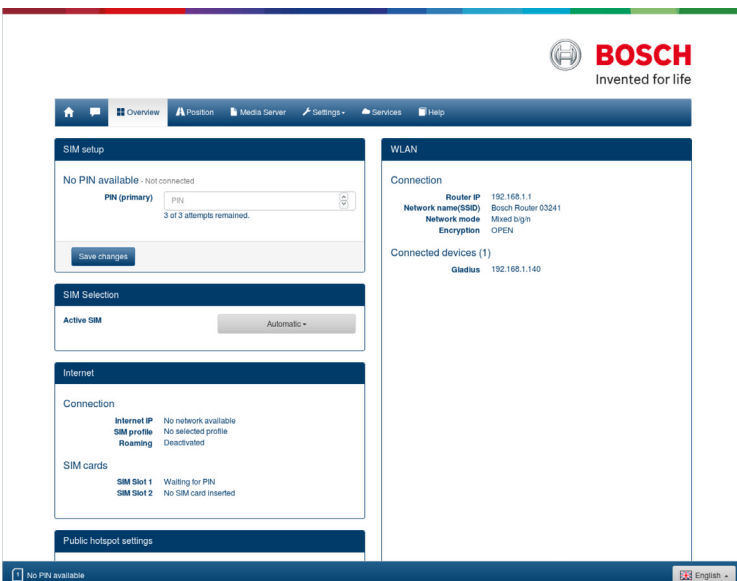

The image shows the Bosch router configuration interface after login. The top navigation bar includes "Overview", "Position", "Media Server", "Settings", "Services", and "Help". The main content area is divided into two columns. The left column contains "SIM setup", "SIM Selection", "Internet", and "Public hotspot settings". The right column contains "WLAN".

SIM setup: Shows "No PIN available - Not connected". There is a "PIN (primary)" field with a dropdown arrow and a message "3 of 3 attempts remained.". A "Save changes" button is at the bottom.

SIM Selection: Shows "Active SIM" and an "Automatic" button.

Internet: Shows connection status: "Internet IP: No network available", "SIM profile: No selected profile", "Roaming: Deactivated". Under "SIM cards", it shows "SIM Slot 1: Waiting for PIN" and "SIM Slot 2: No SIM card inserted".

WLAN: Shows "Connection" details: "Router IP: 192.168.1.1", "Network name (SSID): Bosch Router 03241", "Network mode: Mixed B/G/N", "Encryption: OPEN". Under "Connected devices (1)", it shows "Gladus: 192.168.1.140".

At the bottom left, there is a status bar showing "No PIN available". At the bottom right, there is a language selector showing "English".



BOSCH
Invented for life

SIM setup

No selected profile

Not connected

A profile was automatically identified for your SIM card.
Please select a profile from the list below!

Bild Mobil - BILD Mobilportal	APN: access.vodafone.de
Bild Mobil - Contract	APN: web.vodafone.de
Bild Mobil - BILDmobil Speedstick (Surfpakete)	APN: event.vodafone.de
Vodafone	APN: web.vodafone.de
Vodafone - WebSessions	APN: event.vodafone.de
1&1 - Mobile Broadband	APN: web.vodafone.de
1&1 - Mobile Web	APN: mail.partner.de
Vodafone DE - Vodafone DE	APN: web.vodafone.de

WLAN

Connection


Router IP	192.168.1.1
Network name(SSID)	Bosch Router 02903
Network mode	Mixed b/g/n
Encryption	WPA2

Connected devices (1)


baltes-Lenovo-M30-70	192.168.1.61
----------------------	--------------



 
3. Next, check the device information page in the settings menu ("Device information"). HOTSPLOTS service is only available for software versions 1.1.466 and newer.

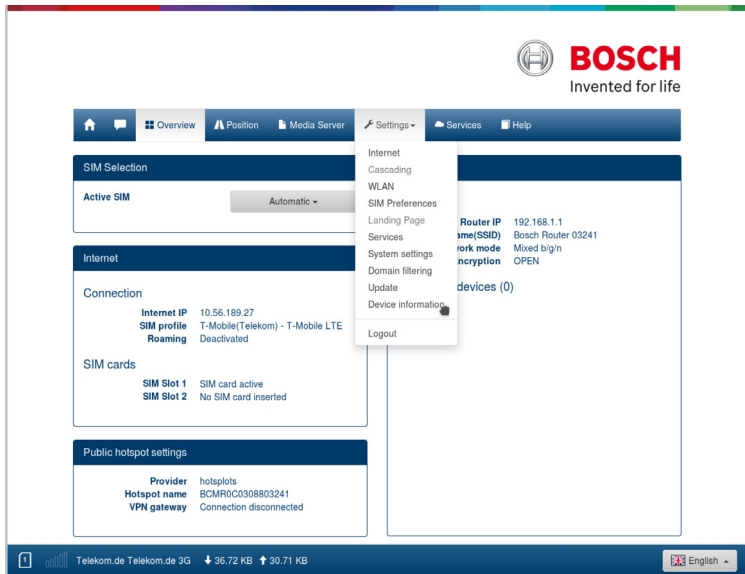

 
4. Please note the serial number and the IMEI number since we need these numbers to activate your hotspot in our database. Following, if the software version is prior to BCMR 1.1.466 please continue with section 5. Otherwise please continue with section 7.

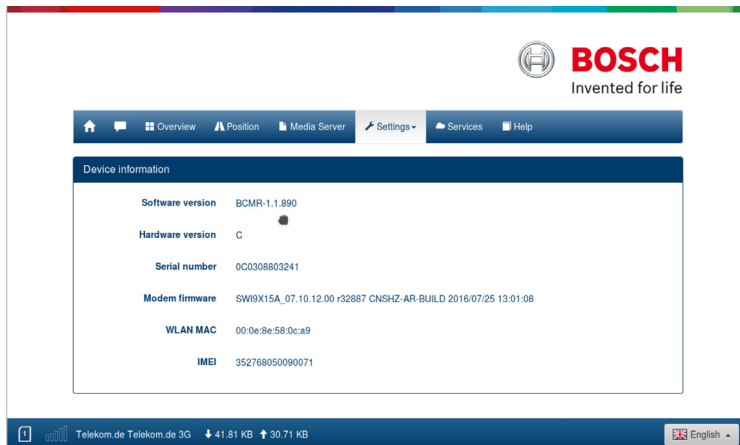

 
5. Please perform a software update. In order to do so, select the update button in the settings menu. You will need a valid SIM card.

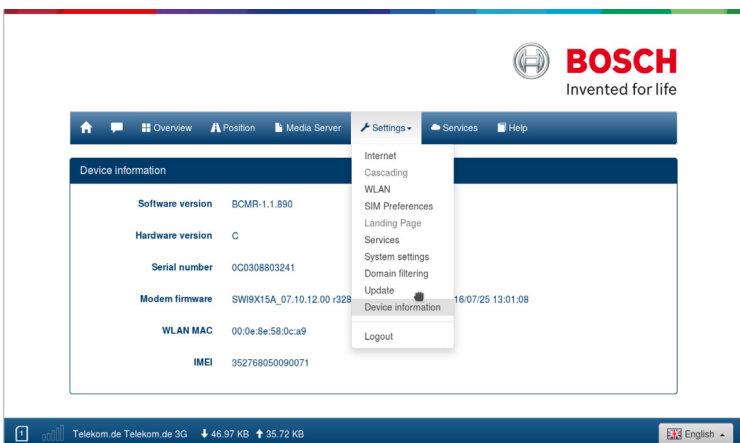

 
- Select the „Check for update“ button. The Coach MediaRouter pulls and installs the newest software available. Depending on the mobile service connection this may take a while. All LED should flash red in the process. Please try to reconnect to the Coach MediaRouter WiFi after a while.

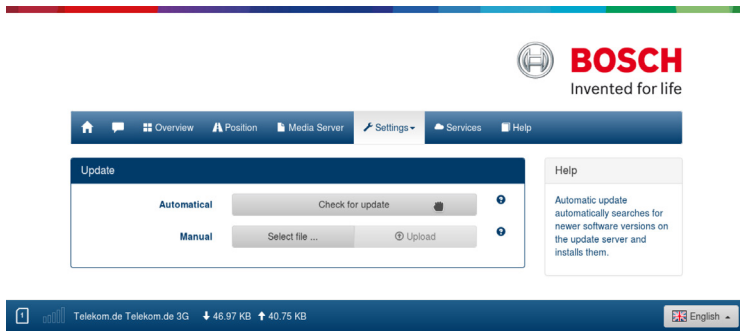

 - Select the “Services” button in the settings menu.

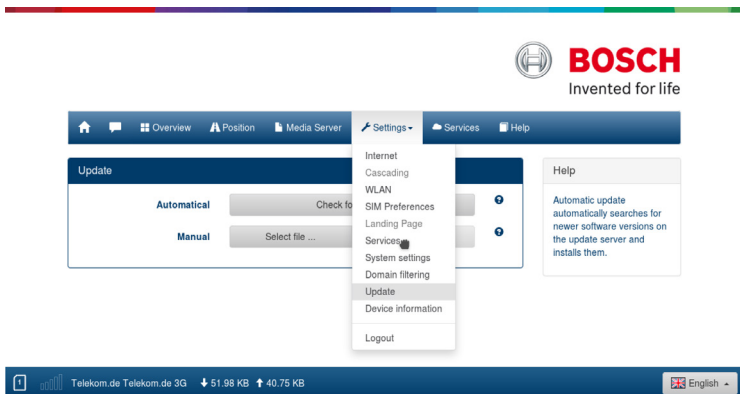

 8. Please enable the public hotspot.

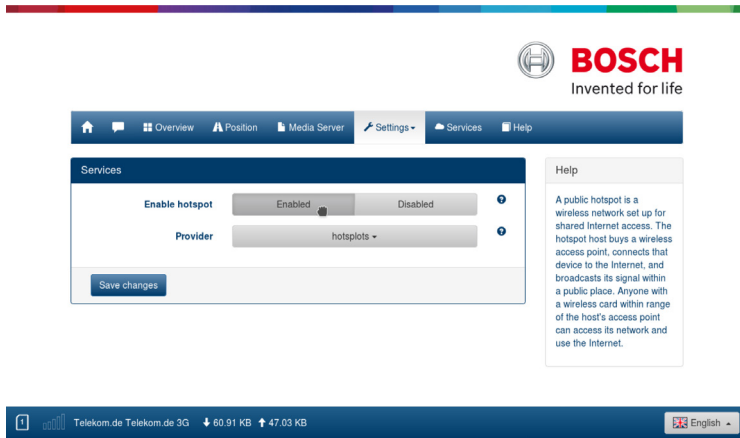

9. The public hotspot is now enabled. Please reconnect to the WiFi in order to use the public hotspot.

10. If your hotspot is not registered in our database yet, please select the „Services-Menue“. You will be redirected to the HOTSPLOTS customer area login.





Danke, dass Sie sich für den Bosch Coach MediaRouter mit HOTSPLOTS WLAN entschieden haben.

Bitte registrieren Sie Ihr mobiles WLAN mit dem Hotspotnamen (Seriennummer) und dem übermittelten Schlüssel (IMEI) in unserem Kundensystem.

Wenn Sie ein neues Nutzerkonto anlegen möchten, wechseln Sie bitte in unseren [Kundenbereich](#).

Sie sind schon Kunde? Dann loggen Sie sich bitte hier ein.

Thank you for choosing the Bosch Coach MediaRouter with HOTSPLOTS Wi-Fi.

Please register your mobile Wi-Fi with the hotspot name (serial number) and the transmitted key (IMEI) in our customer area.

If you would like to create a new user account, please switch to our [customer area](#).

Already a customer? Please log in here.

Username:

Password:

Login

11. If further assistance is required please do not hesitate to contact us by phone (+49 (30) 29 77 348-83) or by e-mail (coaches@hotsplots.de).

10/2017
version 2.3



hotsplots GmbH
Rotherstr. 22
10245 Berlin (Germany)

Sales and consulting
Phone: +49 (30) 29 77 348-83
Fax: +49 (30) 29 77 348-99

coaches@hotsplots.de
www.hotsplots.de