

Electrical Step



Telescopic heavy duty 670mm (model T-670)

(Fitted under the sliding door)

Model	LHD vehicles right step Auto Cool P/N (Step+brackets) (Brackets only)		RHD vehicles left step Auto Cool P/N (Step+brackets) (Brackets only)	
	Mercedes	Sprinter MWB, LWB	016-0004-1	160-99-001A
Volkswagen	Crafter MWB, LWB	016-0004-1	160-99-001A	016-0004-1L 160-16-401L
Fiat	Ducato L2, L3, L4	016-0004-7	160-16-407	016-0004-7 160-16-407
Citroen	Jumper L2, L3, L4	016-0004-7	160-16-407	016-0004-7 160-16-407
Peugeot	Boxer L2, L3, L4	016-0004-7	160-16-407	016-0004-7 160-16-407
Ford up to 2014	Transit RWD: MWB, LWB, Jumbo	016-0004-4	128-99-001	016-0004-4 128-99-001
	Transit FWD: MWB, LWB	016-0004-41	160-16-4031	016-0004-41 160-16-4031
Ford V362	Custom L1;L2	016-0004-15	160-16-015	016-3624-L 160-16-624-L
Ford V363 from 2014	Transit RWD: LWB, Jumbo	016-3634-1	160-16-341	016-3634-1 160-16-341
	Transit FWD: MWB, LWB	016-3634-2	160-16-342	016-3634-2 160-16-342
Renault up to 2014	Trafic L1; L2	016-0004-6	128-99-003	
Opel up to 2014	Vivaro L1; L2	016-0004-6	128-99-003	

LHD vehicles
right step

RHD vehicles
left step

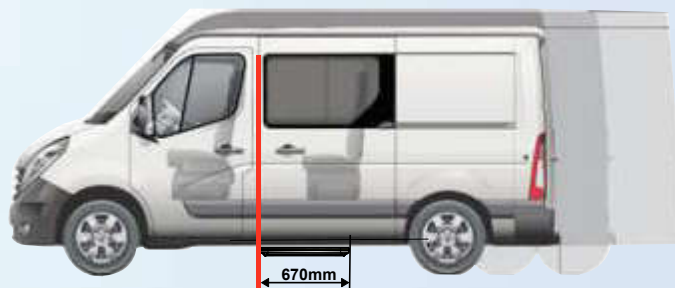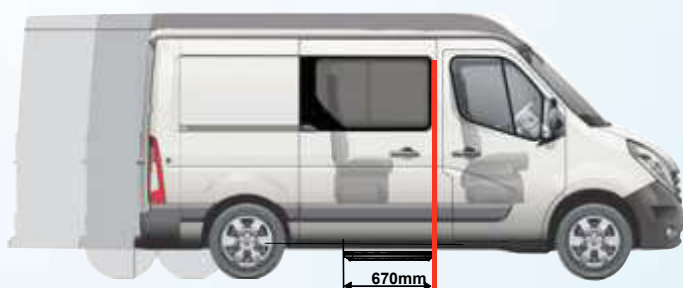


Electrical Step


Telescopic heavy duty 1000mm (model T-1000)

(Fitted under the sliding door)

Model	LHD vehicles right step Auto Cool P/N (Step+brackets) (Brackets only)		RHD vehicles left step Auto Cool P/N (Step+brackets) (Brackets only)	
	Mercedes	Sprinter MWB, LWB	016-0005-10	160-99-001B
	Sprinter up to 2006	016-0005-2	160-16-502	
	Sprinter (Blue Tech)	016-0005-1B	160-16-61B	
Volkswagen	Crafter MWB, LWB	016-0005-10	160-99-001B	016-0005-1L 160-16-501L
	Crafter (Blue Tech)	016-0005-1B	160-16-61B	
	LT35/46 up to 2006	016-0005-2	160-16-502	
	Transporter	016-0005-4	160-16-540	016-0005-4 160-16-540
Fiat	Ducato L2, L3, L4	016-0005-5	160-16-407	016-0005-5 160-16-407
Iveco	Daily MWB, LWB	016-0006-5	160-99-004	016-0006-5 160-99-004
Citroen	Jumper L2, L3, L4	016-0005-5	160-16-407	016-0005-5 160-16-407
Peugeot	Boxer L2,L3,L4	016-0005-5	160-16-407	016-0005-5 160-16-407
Ford up to 2014	Transit RWD: MWB, LWB, Jumbo	016-0005-3	160-16-503	016-0005-3 160-16-503
	Transit FWD: MWB, LWB	016-0005-31	160-16-5031	016-0005-31 160-16-5031
	Custom L2	016-0005-15	160-16-015	016-3624-L 160-16-624-L
Ford V363 from 2014	Transit RWD: LWB, Jumbo	016-3635-1	160-16-351	016-3635-1 160-16-351
	Transit FWD: MWB, LWB	016-3635-2	160-16-352	016-3635-2 160-16-352
Renault	Master L2, L3, L4 from 2010	016-0005-9	160-16-590	
Opel	Movano L2, L3, L4 from 2010	016-0005-9	160-16-590	
Chevrolet	Savana	016-0005-7	160-99-607	

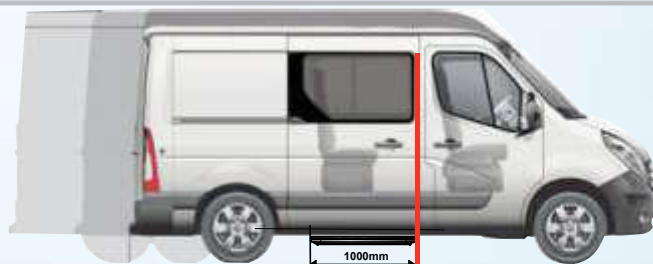

LHD vehicles
right step

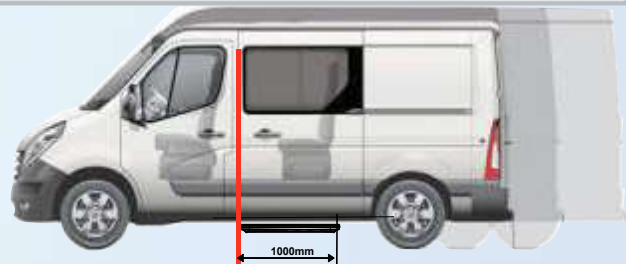

RHD vehicles
left step

Electrical Step

Telescopic heavy duty 1200mm (model T-1200)

(Fitted under the sliding door)

Model	LHD vehicles right step Auto Cool P/N (Step+brackets) (Brackets only)		RHD vehicles left step Auto Cool P/N (Step+brackets) (Brackets only)	
	Mercedes	Sprinter	016-0006-1	160-99-001C
	Sprinter (Blue Tech)	016-0006-1B	160-16-61B	
Volkswagen	Crafter	016-0006-1	160-99-001C	
	Crafter (Blue Tech)	016-0006-1B	160-16-61B	
Fiat	Ducato L2, L3, L4	016-0006-3	160-16-407	016-0006-3 160-16-407
Citroen	Jumper L2, L3, L4	016-0006-3	160-16-407	016-0006-3 160-16-407
Peugeot	Boxer L2, L3, L4	016-0006-3	160-16-407	016-0006-3 160-16-407
Ford up to 2014	Transit RWD: MWB, LWB, Jumbo	016-0006-2	160-99-602	016-0006-2 160-99-602
	Transit FWD: MWB, LWB	016-0006-31	160-16-6031	016-0006-31 160-16-6031
Ford V363 from 2014	Transit RWD: LWB, Jumbo	016-3636-1	160-16-361	016-3636-1 160-16-361
	Transit FWD: LWB	016-3636-2	160-16-362	016-3636-2 160-16-362
Iveco	Daily MWB, LWB	016-0006-4	160-99-004	016-0006-4 160-99-004
Renault	Master L2, L3, L4 from 2010	016-0006-9	160-16-590	
Opel	Movano L2, L3, L4 from 2010	016-0006-9	160-16-590	
Chevrolet	Savana	016-0006-7	160-99-607	

LHD vehicles
right step

RHD vehicles
left step

